


Aim light in any direction by placing on flat surface or stick to any metal surface.

Spot light and Red Signal Light ON/OFF



(A red power button is located on the red LED)

- 1) Press the red button (1 time) to turn white light on high.
- 2) Press button again (2 times) to turn white light on low.
- 3) Press button again (3 times) to activate red light.
- 4) Press button again (4 times) to activate red SOS light.
- 5) Press button again (5 times) to turn lights off

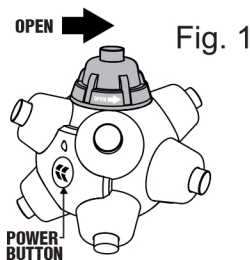

Changing the Batteries:

- 1) Look for "Open-Arrow Icon" located on battery cap (fig. 1)*
- 2) Twist in the direction of the arrow a quarter turn (counter clockwise) and then pull off the cap.
- 3) Tilt downward to allow battery cartridge to slide out, tap lightly in hand if necessary (fig. 2).
- 4) Replace all three AAA batteries. (note (+) and (-) directions).
- 5) Insert cartridge back into the body by aligning the arrow with the notch (fig. 3).
- 6) Replace the cap and twist clockwise a quarter turn.

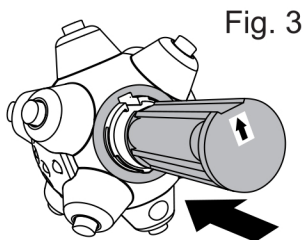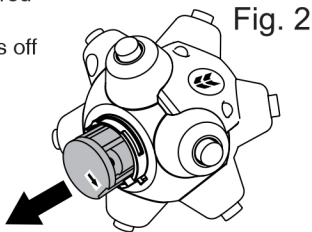

*Attempting to remove the cap with the ON/OFF switch will damage or break the light.

WARNING: (1) Choking Hazard. Small parts, not for children. (2) Do not dispose of batteries in fire - may explode or leak. (3) Do not mix old and new batteries, do not mix alkaline with non-alkaline batteries. (4) Magnets could affect pacemaker/ICD devices. Keep at least 12 inches (30 centimeters) away.